

Security Guide

Yeastar P-Series Cloud Edition

Version: 1.2

Date: 2023-12-16



Contents


Overview.....	1
System Security.....	3
System Security.....	3
Network Security.....	5
Network Security.....	5
Endpoint Security.....	7
Extension Registration Security.....	7
Extension Login Security.....	10
Outbound Call Security.....	17
Outbound Call Security.....	17
Contingency Plan.....	25
Contingency Plan.....	25

Yeastar P-Series Cloud Edition Security Guide

Attacks on PBX system can come from the Internet or telephone lines. Fraudsters always try every means to exploit vulnerabilities to gain access to phone system and make fraudulent calls. As a result, fraudsters take revenues generated from these calls, while you get a costly telephone bill. The Security Guide is intended to elaborate on how to protect your PBX system from security breaches and mitigate the threat of toll fraud.

How do fraudsters get access to a PBX?

Typically, fraudsters use vulnerability scanners to crawl the Internet looking for vulnerabilities in your company's firewalls (like open ports). If any open port is detected, the fraudsters may punch requests at the port in order to tease out information about system vulnerabilities. In the end, they may have all the information they need to brute force their way through the firewall. Once the firewall has been breached, the fraudsters can gain access to the PBX, build a back door into the system, and use it to route as much traffic as they want, eventually leading to toll fraud.

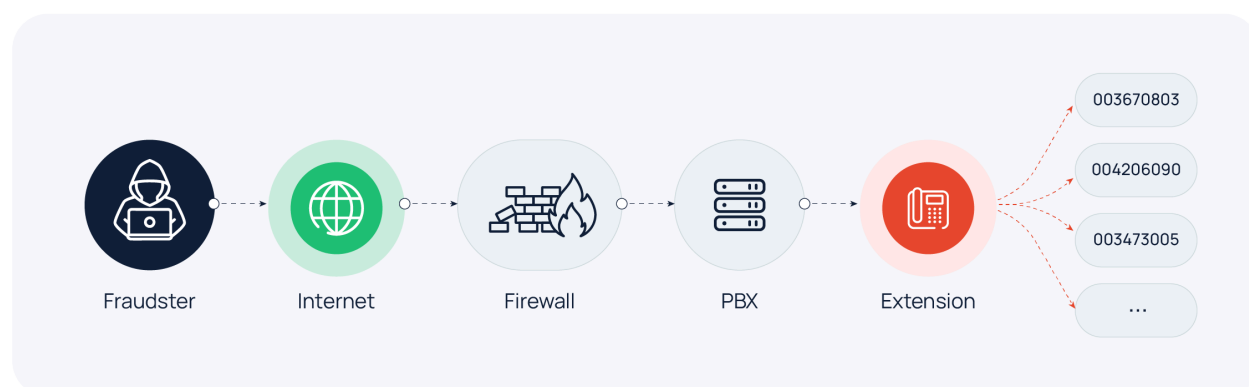

How to protect PBX from security breaches and toll fraud?

Actually, vulnerabilities in your phone system can not be eliminated due to the ever-changing need of your business communications and ever-evolving of hacking techniques. However, you can reduce the vulnerabilities with better awareness, proactive actions, and regular audit.

To maintain a high level of security, we recommend that you adopt a multi-layered security strategy. This involves integrating several protective mechanisms to shield the system from security threats. Even if one defense layer gets compromised, others remain in place to offer security.



System Security

System Security

System Security is the first line of defense in multi-layered security strategy, providing basic protection to shield your phone system from known threats and security breaches. You can enhance system security by **Upgrade Firmware** and **Disable Secure Shell (SSH)**.

Upgrade Firmware

Typically, the most recent firmware version is often the most secure with bugs and vulnerabilities being found and fixed. In addition, with technology evolving, some critical security features or layers of protection are only supported in the latest version. For security reasons, it is important to keep your PBX firmware up to date.

You can achieve this by scheduling automatic detection of firmware updates, and then manually upgrade to the new version.

1. Go to **Maintenance > Upgrade**.
2. In the **Automatic Upgrade** section, select , then specify the frequency and time as needed.



Note:

We recommend that you upgrade the system during non-business hours to avoid service interruption.

Automatic Upgrade

☐ Never check for updates

☒ Check for updates and notify me

* Automatically check for updates at

Daily


00:00

3. Click **Save** and **Apply**.

Disable Secure Shell (SSH)

Hackers are constantly scanning for SSH servers and repeatedly trying thousands of user-name and password combinations in seconds until gaining access to the server. Once the hackers gain access, they can get valuable information for toll fraud or other malicious purposes. To prevent this, we recommend that you disable SSH for PBX system and enable SSH ONLY when troubleshooting is required.

To disable SSH, go to **Security > Security Settings > Console/SSH Access**, turn off the switch of **SSH Access**.

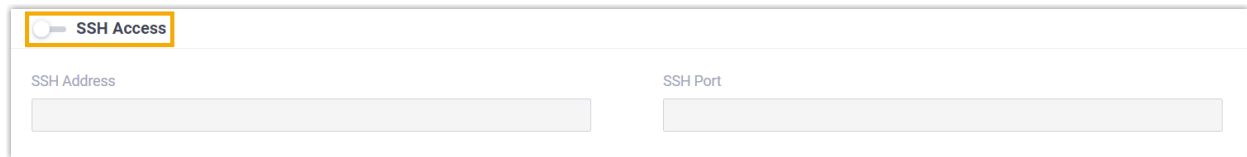

The screenshot shows the 'SSH Access' configuration page. At the top, there is a toggle switch labeled 'SSH Access' which is currently turned off. Below this, there are two input fields: 'SSH Address' and 'SSH Port'. The 'SSH Address' field is empty, and the 'SSH Port' field is also empty.

Network Security

Network Security

Network Security is the second line of defense in multi-layered security strategy, monitoring access to your phone system, accepting or denying access based on a set of pre-defined rules. You can enhance network security by utilizing **Allowed Country IPs** and **Allowed IPs** policies.

Restrict Access to PBX by Country / Region

Implement geographic restrictions to limit access to Yeastar P-Series Cloud Edition from specific countries or regions. PBX will only allow access from your trusted geographic locations while blocking all other traffic.

To set up geographic restrictions, follow the instructions below:


1. Go to **Security > Security Settings > Allowed Country IPs**.
2. Turn on the switch of **Enable Allowed Country/Region IP Access Protection**.



Important:

If a pop-up appears, you **MUST** confirm to allow access from your country or region, or you will **NOT** be able to access your system.

3. At the top-right search bar, search the country or region that you want to grant access, then turn on the switch in the **Operations** column.

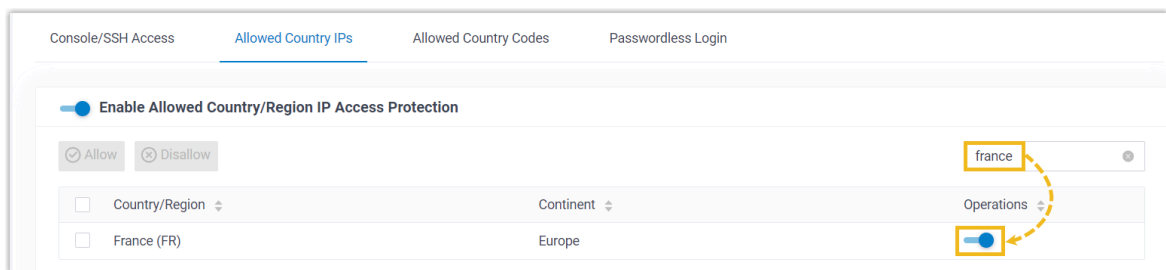


4. Click **Apply**.

Allow Trusted Access to PBX by IP Address

Yeastar P-Series Cloud Edition has built-in rules to protect trusted connections (such as the connections with auto-provisioned devices and Yeastar services) and block unknown threats by monitoring the packets sent to specific ports within a specific time interval.

To prevent your trusted device from being accidentally blocked due to sending too many packets, you can add the device's address to the allowlist. PBX will always accept connections from the device.

1. Log in to PBX web portal, go to **Security > Security Rules**.
2. Under **Allowed IPs** tab, click **Add** to add a rule.

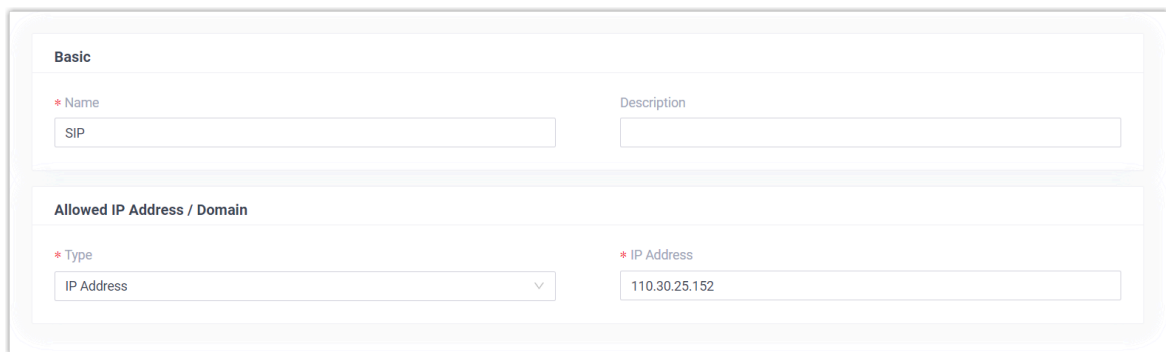

The screenshot displays the 'Security Rules' configuration page in the PBX web portal. It features two main sections: 'Basic' and 'Allowed IP Address / Domain'. In the 'Basic' section, there is a 'Name' field containing 'SIP' and an empty 'Description' field. The 'Allowed IP Address / Domain' section contains a 'Type' dropdown menu set to 'IP Address' and an 'IP Address' field containing '110.30.25.152'.

Basic	
* Name	Description
SIP	

Allowed IP Address / Domain	
* Type	* IP Address
IP Address	110.30.25.152

3. Click **Save** and **Apply**.

Endpoint Security

Extension Registration Security

Endpoint Security is the third line of defense in multi-layered security strategy, preventing fraudsters from registering or logging in to extension accounts. Yeastar P-Series Cloud Edition has default rules to prevent malicious registration of SIP extensions by monitoring **Registration Attempts**, you can also enhance extension registration security by restricting **Registration Credential**, **Concurrent Registration**, **User Agent**, and **IP Address**.

Account Lockout for Failed Registration Attempts

Yeastar P-Series Cloud Edition has a built-in account lockout policy to prevent unauthorized access to extension accounts by automatically locking out the risky accounts after a certain number of failed registration attempts from the same IP address. When an account is locked out, the PBX will block the source IP address, display it in **Block IPs**, and send notifications of **Extension Registration Blocked Out** to the specified contacts.


To ensure that you can be notified when an account is locked out, you need to enable the event notification and add contacts to receive notifications.

1. Go to **System > Event Notification**.
2. Under **Event Type** tab, turn on the notification of **Extension Registration Blocked**

Out.

Security			
Event Name	Event Level	Notification	Email Template
Web User Blocked Out	Alert	<input checked="" type="checkbox"/>	✎
Linkus User Blocked Out	Alert	<input checked="" type="checkbox"/>	✎
Extension Registration Blocked Out	Alert	<input checked="" type="checkbox"/>	✎

3. Under **Notification Contacts** tab, add contacts to receive event notifications.

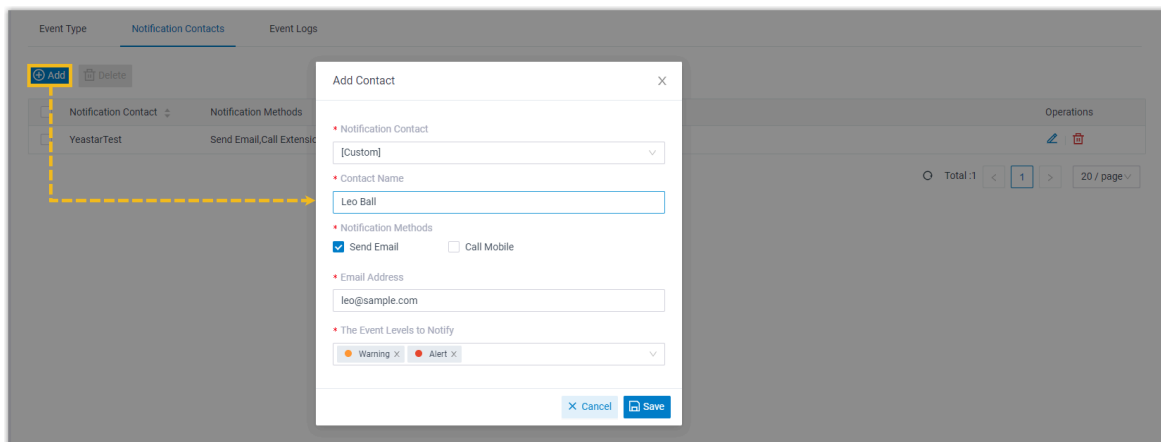

After receiving notifications, you can check the details on PBX web portal (Path: **Security > Security Rules > Blocked IPs**).

Allowed IPs Blocked IPs Outbound Call Frequency Restriction							
Delete							
<input type="checkbox"/>	Defense Type	Block Type	Block Range	Time of Attack	Protocol	Attacked Port	Source IP
<input type="checkbox"/>	Extension Registration	Block Account	SIP Extension:1001	10/30/2023 02:32:28	SIP	SIP	110.87.9

Use Complex Credentials for SIP Registration

Weak SIP credentials can leave a potential security gap that fraudsters can easily exploit. Therefore, complex name and password should be used when registering extensions.

1. Go to **Extension and Trunk > Extension**, edit the desired extension.
2. In the **Extension Information** section, set complex registration name and registration password.

Extension Information

* Extension Number

* Registration Name

* Caller ID

* Registration Password



Tip:

Here are some tips for a complex credential:

- At least 10 characters long.
- A combination of uppercase letters, lowercase letters, and numbers.



- Avoid 4 repeated or consecutive numbers.
- Avoid extension number or extension name.

3. Click **Save** and **Apply**.

Restrict Multiple Registrations on the Same Extension

By default, Yeastar P-Series Cloud Edition allows one extension to be registered on a single device only. We recommend that you keep the restriction UNLESS you need multiple devices to register with a single SIP extension. If necessary, you can increase the concurrent registration limit for a SIP extension as follows:

1. Go to **Extension and Trunk > Extension**, edit the desired extension.
2. In the **Extension Information** section, select a value from the drop-down list of **IP Phone Concurrent Registrations**.

The screenshot shows the 'Extension Information' configuration page. It contains several input fields: 'Extension Number' with the value '2000', 'Caller ID' with the value '2000', 'Registration Name' with the value '2000', and 'Registration Password' which is masked with asterisks. Below these fields is a dropdown menu labeled 'IP Phone Concurrent Registrations' which is currently set to '2' and is highlighted with a yellow border. There are also icons for eye, copy, and refresh next to the password field.

3. Click **Save** and **Apply**.

Restrict Extension Registration by User Agent

Restrict extension registration by authenticating user agent. When registering, SIP phones will send packets containing a user agent string. If the prefix of the user agent does not match the defined value, the registration will fail.

To restrict extension registration by user agent, follow the instructions below:

1. Go to **Extension and Trunk > Extension**, edit the desired extension.
2. Under **Security** tab, select the checkbox of **Enable User Agent Registration Authorization**, and set up the user agent.

SIP User Agent Identification

☒ Enable User Agent Registration Authorization

* User Agent	Operations
Yealink	
+ Add User Agent	

3. Click **Save** and **Apply**.

Restrict Extension Registration by IP Address

Restrict extension registration to trusted IP addresses. In this way, the system will automatically drop registration requests from untrusted IPs to prevent unauthorized devices from registering.

To restrict extension registration by IP address, follow the instructions below:

1. Go to **Extension and Trunk > Extension**, edit the desired extension.
2. Under **Security** tab, select the checkbox of **Enable IP Restriction** and add the allowed IP address.

SIP Registration IP Restriction

☒ Enable IP Restriction

* Permitted IP	* Subnet Mask	Operations
116.117.129.245	255.255.255.255	
+ Add IP		

3. Click **Save** and **Apply**.

Extension Login Security

Endpoint Security is the third line of defense in multi-layered security strategy, preventing fraudsters from registering or logging in to extension accounts. Yeastar P-Series Cloud Edition has default rules to prevent malicious login to SIP extensions by monitoring **Login Attempts**, you can also enhance extension login security by utilizing the **Single Sign-on (SSO)**, **Two-factor Authentication (2FA)**, **Login QR Code / Link**, **Password**, and **User Role** policies.

Account Lockout for Failed Login Attempts

Yeastar P-Series Cloud Edition has a built-in account lockout policy to prevent unauthorized access to PBX web portal and Linkus clients:


- If an IP address reaches the defined number of failed login attempts within a specific time period, the IP address will be denied further attempts temporarily.
- If the IP address reaches the maximum number of failed login attempts, the IP address will be banned from logging into the account permanently. The PBX will block the IP address, display it in **Block IPs**, and send notifications of **Web User Blocked Out** or **Linkus User Blocked Out** to the specified contacts.

To ensure that you can be notified when an IP address is blocked, you need to enable the event notification and add contacts to receive notifications.

1. Go to **System > Event Notification**.
2. Under **Event Type** tab, turn on the notification of **Web User Blocked Out** and **Linkus User Blocked Out**.

Event Type	Notification Contacts	Event Logs	
Security			
Event Name	Event Level	Notification	Email Template
Web User Blocked Out	● Alert	<div><div></div></div>	✎
Linkus User Blocked Out	● Alert	<div><div></div></div>	✎

3. Under **Notification Contacts** tab, add contacts to receive event notifications.

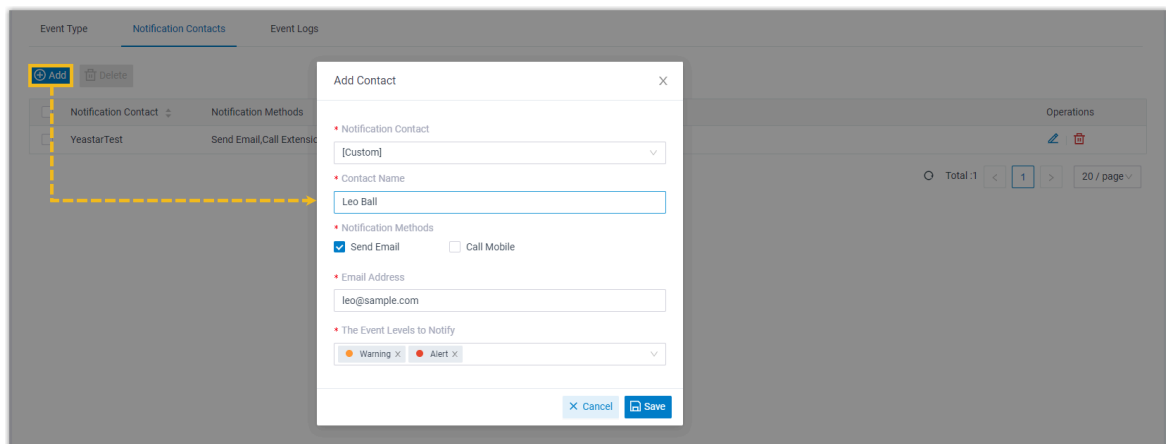

After receiving notifications, you can check the details on PBX web portal (Path: **Security > Security Rules > Blocked IPs**).


Allowed IPsBlocked IPsoutbound Call Frequency Restriction

Delete

<input type="checkbox"/>	Defense Type	Block Type	Block Range	Time of Attack	Protocol	Attacked Port	Source IP	Operations
<input type="checkbox"/>	Web Login	Block Account	WebUser:1000	10/30/2023 02:11:07	HTTPS	14500	110.87.9	<div></div>

Single Sign-on (SSO) for Third-party Authentication


The integration between Yeastar P-Series Cloud Edition and **Microsoft 365** supports Single Sign-on (SSO) feature, which allows users to log in to Linkus UC Clients using their Microsoft accounts. This eliminates the need to remember multiple credentials. Additionally, it will further enhance security due to the multi-factor authentication mandatory for Microsoft accounts.

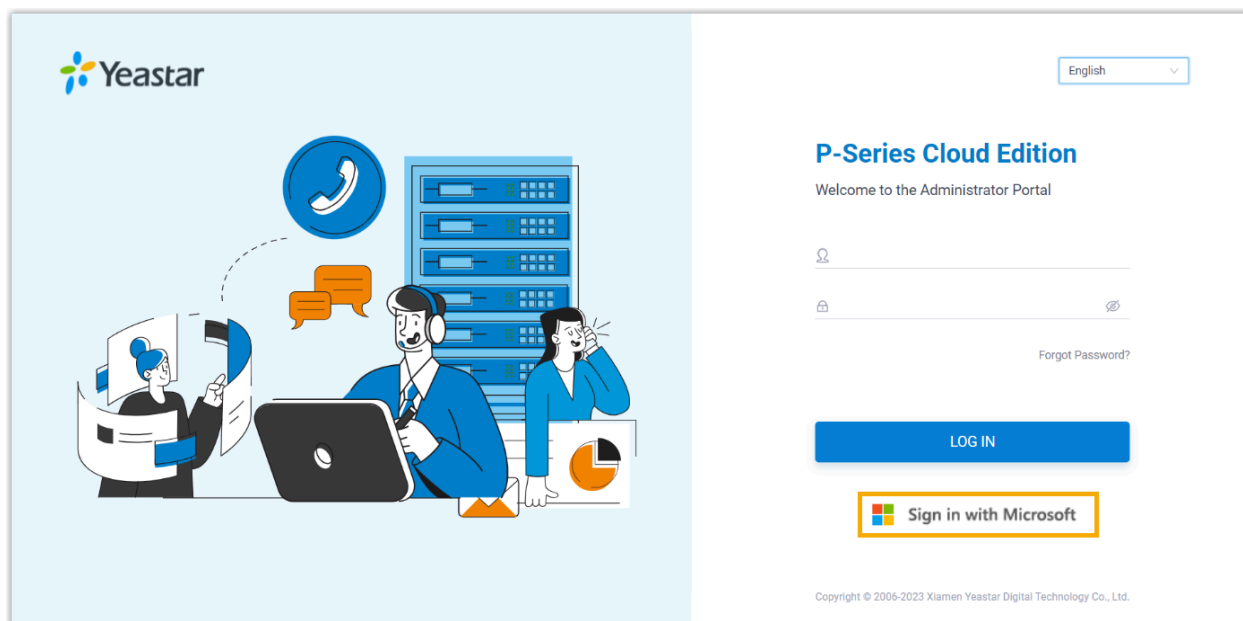

To allow users to log in to Linkus UC Clients using their Microsoft 365 accounts, you need to integrate the PBX with **Azure Active Directory** or **Active Directory**, and enable SSO. For more information on how to set up the integration, see [Azure Active Directory Integration Guide](#) and [Active Directory Integration Guide](#).

Two-factor Authentication (2FA) for Extra Login Security

Two-factor Authentication (2FA) provides an extra layer of security to protect account by requiring two verification factors to log in. The first factor is the password that is used to log in to account, the second factor is a code that is sent to the specified device.

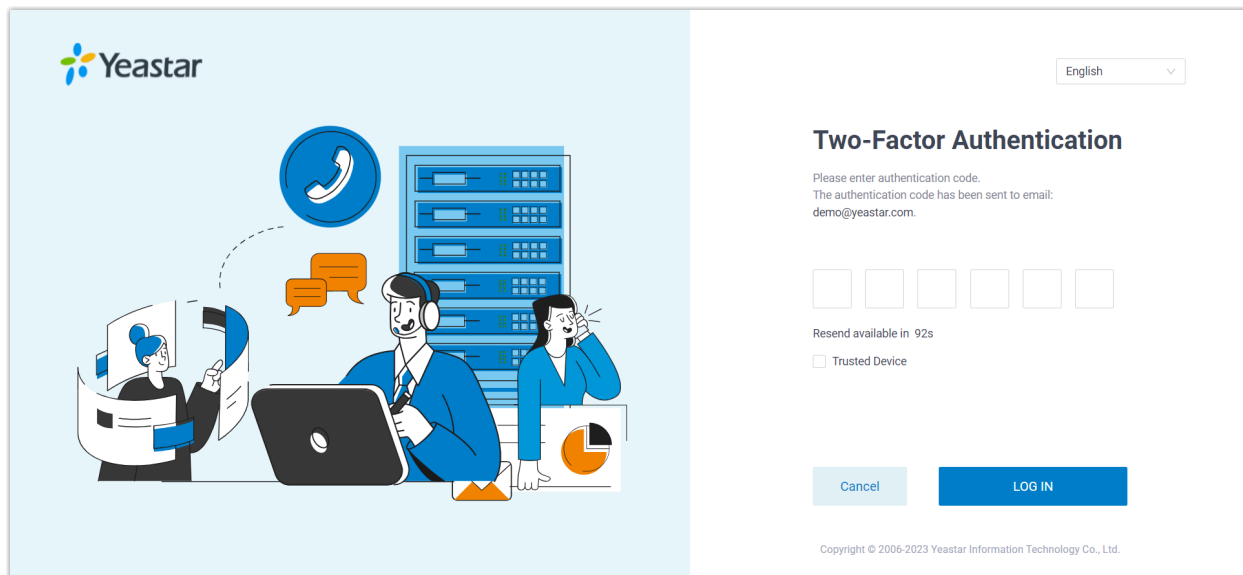

Extension users can enable 2FA themselves on **Linkus Web Client** or **Linkus Desktop Client**, either by installing an authenticator app on smartphone or via email. With 2FA enabled, the account password as well as an authentication code are required when logging in to their accounts. For more information on how to set up 2FA, see [Enable 2FA on Linkus Web Client](#) and [Enable 2FA on Linkus Desktop Client](#).



Note:

You can also enable 2FA for your Super Administrator account. For more information, see [Enable 2FA using Authenticator Application](#) or [Enable 2FA using Email](#).


QR Code / Link for Passwordless Login

QR Code Authentication and Link Authentication are more secure ways to log in to Linkus clients than traditional password login, as they are encrypted and can only be used ONCE.

You can send the Linkus login QR code / link to users in the following ways:


Provide a single user with login QR code / link

1. Go to **Extension and Trunk > Extension**, edit the desired extension.
2. Under **Linkus Clients** tab, click **Login QR Code** or **Login Link** to copy the credential and send to users.

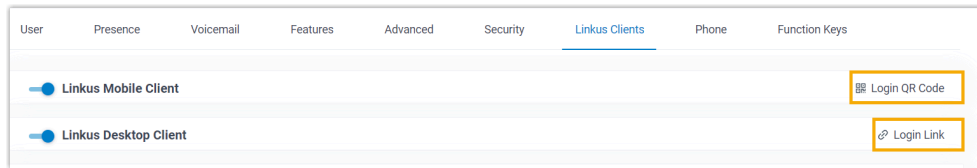

Provide multiple users with login QR code / link

1. Go to **Extension and Trunk > Extension**.
2. Select the desired extensions, then click **Welcome Email**.

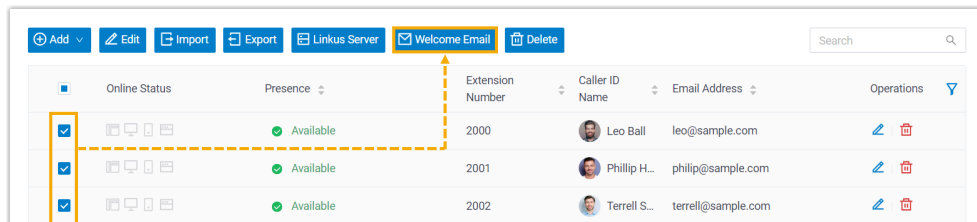

Strong Password for Manual Login

Weak passwords can leave a potential security gap that fraudsters can easily exploit. Therefore, strong password should be set in case users need to manually log in to Linkus UC clients.

1. Go to **Extension and Trunk > Extension**, edit the desired extension.
2. In the **User Information** section, set a strong user password.

 A screenshot of the 'User Information' form. It contains several input fields: 'First Name' (with '1000' entered), 'Last Name', 'Email Address', 'Mobile Number', 'User Password', and 'User Role'. The 'User Password' field is highlighted with a yellow box and contains the text '1DhZSD57bG'. The 'User Role' dropdown menu is set to 'None'.


Tip:

Here are some tips for a strong password:

- At least 10 characters long.
- A combination of uppercase letters, lowercase letters, and numbers.
- Avoid 4 repeated or consecutive numbers.
- Avoid extension number or extension name.

3. Click **Save** and **Apply**.


User Role for Granular Access Control

Role-based access control is a security approach that authorizes or restricts system access permissions to users based on their roles within the company. This allows users to access the administrative privileges they need to conduct their jobs, and minimizes the risk of unauthorized users accessing sensitive information or performing unauthorized tasks.

Yeastar P-Series Cloud Edition has built-in roles: **Super Administrator**, **Administrator**, **Supervisor**, **Operator**, **Employee**, **Human Resource**, and **Accounting**. You can use the built-in roles and assign them to employees without further configuration, or create your own custom roles with the exact set of permissions you need.

Create a Custom Role

1. Go to **Extension and Trunk > Role**.
2. Click **Add** to create a role from scratch, or click **Copy Role** to create a role by copying an existing role.

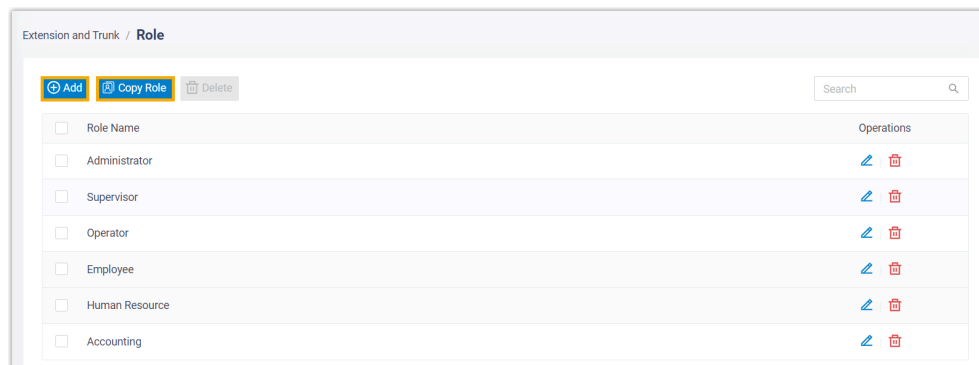

Assign Roles to Users

1. Go to **Extension and Trunk > Extension**, edit the desired extension.
2. In the **User Information** section, select a role from the drop-down list of **User Role**.

User Information

First Name:

Last Name:

Email Address:

Mobile Number:

User Password:

User Role: **Administrator** (selected)

3. Click **Save** and **Apply**.

Outbound Call Security

Outbound Call Security

Outbound Call Security is the last line of defense in multi-layered security strategy, restricting outbound calls from Yeastar P-Series Cloud Edition based on a set of pre-defined rules and minimizing the losses caused by toll fraud if there is any. You can enhance outbound call security by restricting **Outbound Route Permission, PIN Code, Time Condition, Country / Region, Phone Number, Call Frequency, Concurrent Calls, and Call Duration.**

Restrict Outbound Dialing by Outbound Route Permission

Employees perform different tasks in a company, and not all of them need to make outbound calls. When configuring the PBX for outbound dialing, consider setting different outbound routes for different trunks (e.g. local, long-distance, international, etc.), and assign outbound route permission only to the extension users that require the use of it.

<input type="checkbox"/>	Name	Outbound Caller ID	Dial Pattern	Trunk	Extension/Group	Move	Operations
<input type="checkbox"/>	Local_Calls		8X.	Local	Extension Group...	↑ ↓	✎ 🗑
<input type="checkbox"/>	Long_Dist...		0X.	Long_Dist...	Extension Group...	↑ ↓	✎ 🗑
<input type="checkbox"/>	Internatio...		9X.	Internati...	2000-Leo Ball 2001-Phillip Hu...	↑ ↓	✎ 🗑

Restrict Outbound Dialing by PIN Code

Set password for outbound route to require callers to enter a PIN code before dialing out. Only when a valid PIN code is entered can the call be routed out through the outbound route.

You can set a single PIN or multiple PINs for an outbound route.

Set a single PIN for an outbound route

1. Go to **Call Control > Outbound Route**, edit the desired outbound route.

2. In the **Outbound Route Password** drop-down list, select **Single PIN** and set a PIN code.

3. Click **Save** and **Apply**.

Set multiple PINs for an outbound route

1. Create a PIN list on **Call Features > PIN List**.

2. Link the PIN list to outbound route on **Call Control > Outbound Route > Outbound Route Password**.

3. Click **Save** and **Apply**.

Restrict Outbound Dialing by Time Condition

Hacking attempts are usually made during non-business hours, over weekends, and during holiday periods when the system is less attended. You can configure different outbound call restriction rules for different time periods to reinforce security. For example, you might create a Time Condition called “Business Hours”, and only allow outbound calls during business hours by applying the Time Condition to an outbound route, as shown below.

1. Create a Time Condition on **Call Control > Business Hours and Holidays**.

2. Apply the Time Condition to an outbound route.

a. Go to **Call Control > Outbound Route**.

b. In the **Time Condition** section, select a time condition to limit when outbound calls can be made using the outbound route.

c. Click **Save** and **Apply**.



Note:


For detailed introduction and instruction about **Time Condition**, see [Overview of Business Hours and Holidays](#).

Restrict Outbound Dialing by Country / Region

If your company is engaged in international business and your employees need to interact with partners or customers over the phone, you can set up international dialing on the PBX. However, this puts your system in the danger of international toll fraud and may result in significant financial loss.


To mitigate the risk, we recommend that you restrict the international dialing permission only to the extension users and countries /regions that are required.

1. Grant international dialing permission to the desired extension user.
 - a. Go to **Extension and Trunk > Extension**, edit the desired extension.
 - b. Under **Security** tab, unselect the checkbox of **Disallow International Calls**.

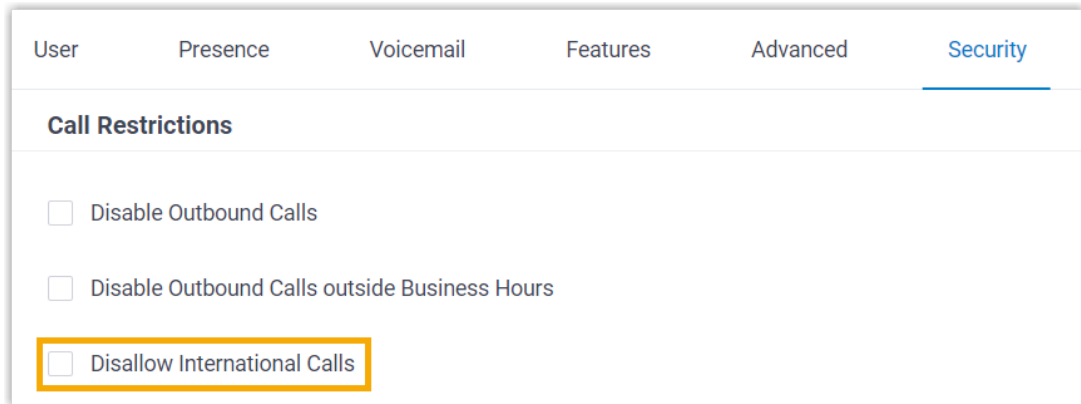

The screenshot shows the 'Security' tab of an extension's configuration page. Under the 'Call Restrictions' section, there are three checkboxes: 'Disable Outbound Calls', 'Disable Outbound Calls outside Business Hours', and 'Disallow International Calls'. The 'Disallow International Calls' checkbox is highlighted with a yellow rectangular box.


- c. Click **Save** and **Apply**.
2. Enable international dialing to the desired countries or regions.

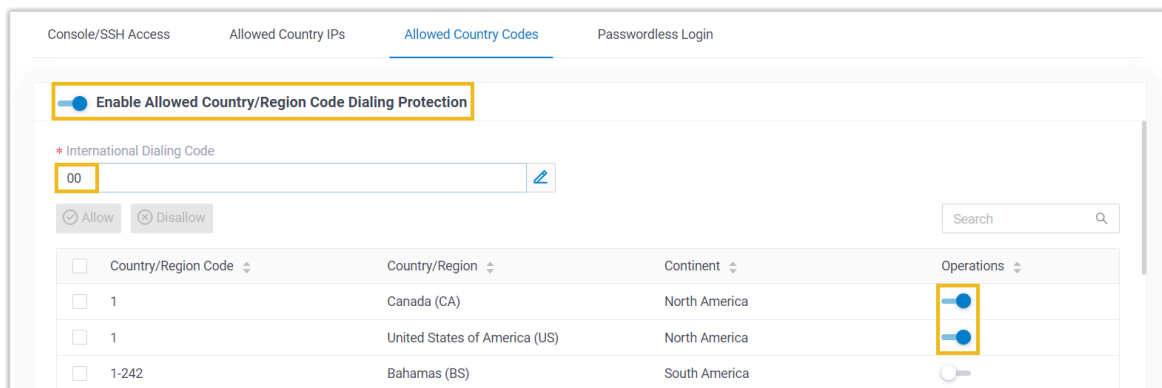

The screenshot shows the 'Allowed Country Codes' configuration page. At the top, the 'Enable Allowed Country/Region Code Dialing Protection' switch is turned on and highlighted with a yellow box. Below it, the 'International Dialing Code' field contains '00'. There are 'Allow' and 'Disallow' buttons. A table lists countries with their respective 'Operations' toggle switches. The 'Operations' column has three entries: Canada (CA), United States of America (US), and Bahamas (BS). The toggle switches for Canada and US are turned on and highlighted with yellow boxes.

Country/Region Code	Country/Region	Continent	Operations
1	Canada (CA)	North America	On
1	United States of America (US)	North America	On
1-242	Bahamas (BS)	South America	Off

- a. Go to **Security > Security Settings > Allowed Country Codes**.
 - b. Turn on the switch of **Enable Allowed Country/Region Code Dialing Protection**.
 - c. In the **International Dialing Code** field, enter the dialing prefix of international call for your country.
 - d. In the **Operations** column, enable the desired country or region.
 - e. Click **Apply**.
3. Ensure that there is at least one outbound route that matches the international dialing code and is available for the extension user to dial out.

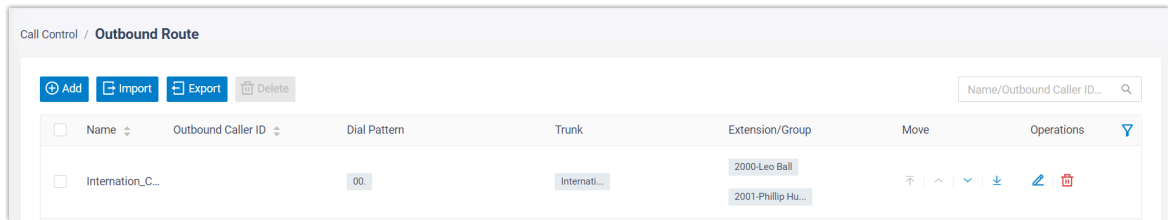

Restrict Outbound Dialing by Phone Number


Toll fraud happens when someone gains access to your phone system and generates a high volume of calls to premium rate numbers. As a result, fraudsters take revenues generated from these calls, while you get a costly telephone bill. It is advisable to restrict outbound calls to such premium rate numbers. This can be achieved by blocking specific phone numbers or number patterns.

1. Go to **Call Features > Blocked/Allowed Numbers > Blocked Numbers**.
2. Click **Add** to add the phone numbers that users can not dial out.



Tip:

You can enter specific numbers or number patterns. For detailed introduction about number pattern, see [Number Pattern](#).

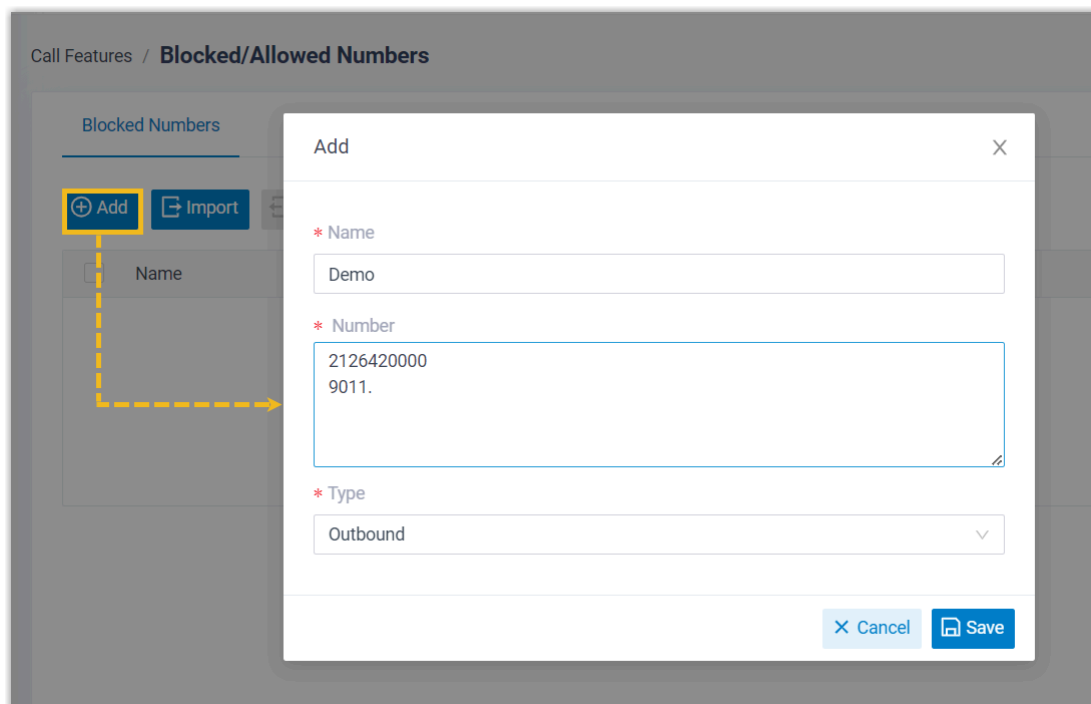


3. Click **Save** and **Apply**.

Restrict Outbound Dialing by Frequency of Calls


Limit the number of outbound calls that extension users can make within a certain time period. When the limit is reached, any further outbound calls from the extension will be denied.

Yeastar P-Series Cloud Edition has a default rule, restricting that each extension user can make up to 5 outbound calls per second. You can use the default rule, or customize a rule and associate it with the desired extension users.

1. Create a custom restriction rule.
 - a. Go to **Security > Security Rules > Outbound Call Frequency Restriction**.
 - b. Click **Add** to add a rule.

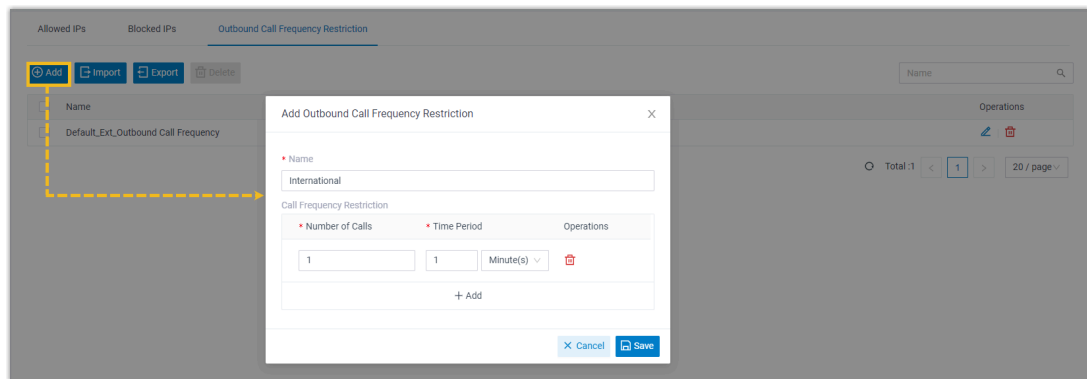

- c. Click **Save**.
2. Associate the custom rule with desired extension users.
 - a. Go to **Extension and Trunk > Extension**, edit the desired extension.
 - b. Under **Security** tab, select the custom rule from the drop-down list of **Outbound Call Frequency Restriction**.

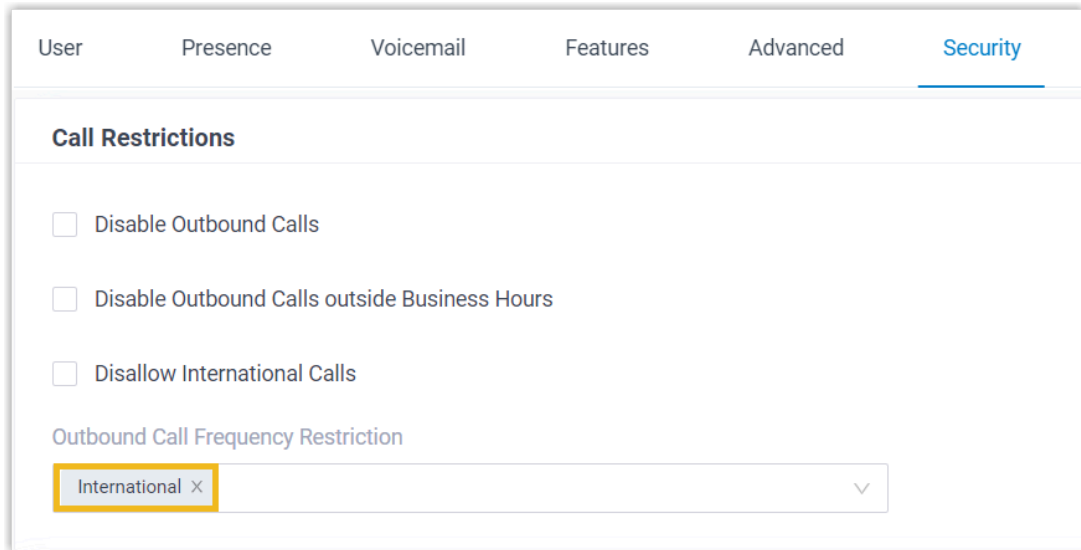


The screenshot shows the 'Security' tab in the Yeastar P-Series Cloud Edition interface. Under the 'Call Restrictions' section, there are three unchecked checkboxes: 'Disable Outbound Calls', 'Disable Outbound Calls outside Business Hours', and 'Disallow International Calls'. Below these is the 'Outbound Call Frequency Restriction' dropdown menu, which is highlighted with a yellow box and shows 'International' selected with a close button (X) and a dropdown arrow (V).

c. Click **Save** and **Apply**.

Restrict Outbound Calling by Concurrent Calls

Limit the number of simultaneous outbound calls on SIP trunks, so as to prevent fraudsters from generating a high volume of calls over the trunks without limitation.

1. Go to **Extension and Trunk > Trunk**, edit the desired SIP trunk.
2. Under **Advanced** tab, select or enter a value in the **Maximum Concurrent Calls** field.

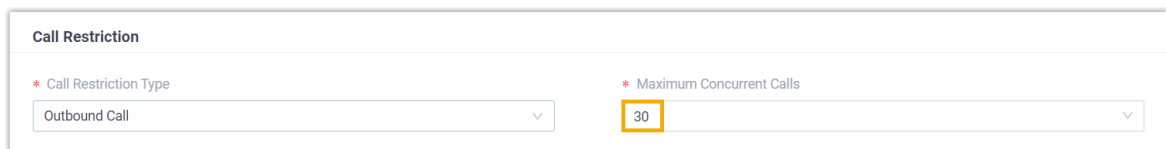

The screenshot shows the 'Call Restriction' form. It has two fields: 'Call Restriction Type' with a dropdown menu showing 'Outbound Call', and 'Maximum Concurrent Calls' with a text input field containing the number '30'. The 'Maximum Concurrent Calls' field is highlighted with a yellow box.

3. Click **Save** and **Apply**.

Restrict Outbound Calling by Call Duration


Set restrictions on the duration of outbound calls to automatically end calls when reaching the specified time limit, this will help you prevent potential misuse of the phone system and control call costs.

You can implement call duration control on a global basis or on a per-user basis.

Limit Outbound Call Duration for All Users (Global Setting)

1. Go to **PBX Settings > Preferences**.

2. In the **Basic** section, select or enter a value in the **Max Call Duration (s)** field.

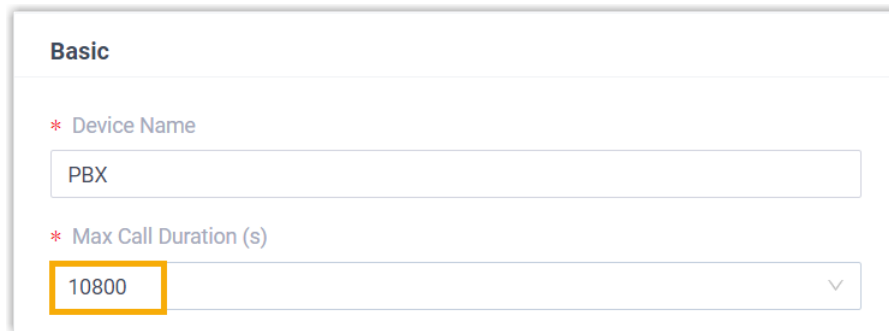


The screenshot shows a configuration panel titled "Basic". It contains two fields: "Device Name" with the value "PBX" and "Max Call Duration (s)" with the value "10800". The "Max Call Duration (s)" field is highlighted with a yellow border.

3. Click **Save** and **Apply**.

Limit Outbound Call Duration for Specific Users (Per-User Setting)

1. Go to **Extension and Trunk > Extension**, edit the desired extension.
2. Under **Security** tab, select a value from the drop-down list of **Max Outbound Call Duration (s)**.

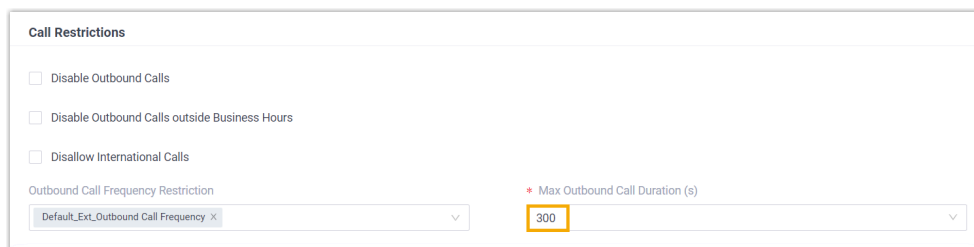

The screenshot shows a configuration panel titled "Call Restrictions". It contains three checkboxes: "Disable Outbound Calls", "Disable Outbound Calls outside Business Hours", and "Disallow International Calls". Below these is a section for "Outbound Call Frequency Restriction" with a dropdown menu showing "Default_Ext_Outbound Call Frequency X". To the right is a field for "Max Outbound Call Duration (s)" with the value "300". The "Max Outbound Call Duration (s)" field is highlighted with a yellow border.

3. Click **Save** and **Apply**.

Contingency Plan

Contingency Plan


Although anti-hacking measures can be taken to protect your phone system, there is no absolute safety. Therefore, a contingency plan should in place to ensure a timely and effective response in case fraudsters successfully infiltrate your PBX or force your PBX to fail. You can utilize the **Event Notification and Logging** policy to monitor and get notified of critical events in real time, and the **Backup** policy to back up data and configurations for disaster recovery in case of system failure or data loss.

Event Notification and Logging

Yeastar P-Series Cloud Edition supports to monitor and log system events, and notify relevant contacts when events occur.


You can control the events to monitor, the contacts to receive notifications, the way to notify (send email, call extension, or call mobile), as well as the content to send.

1. Go to **System > Event Notification**.
2. Under **Event Type** tab, turn on the notification of the desired events, and customize the event level and email template as needed.

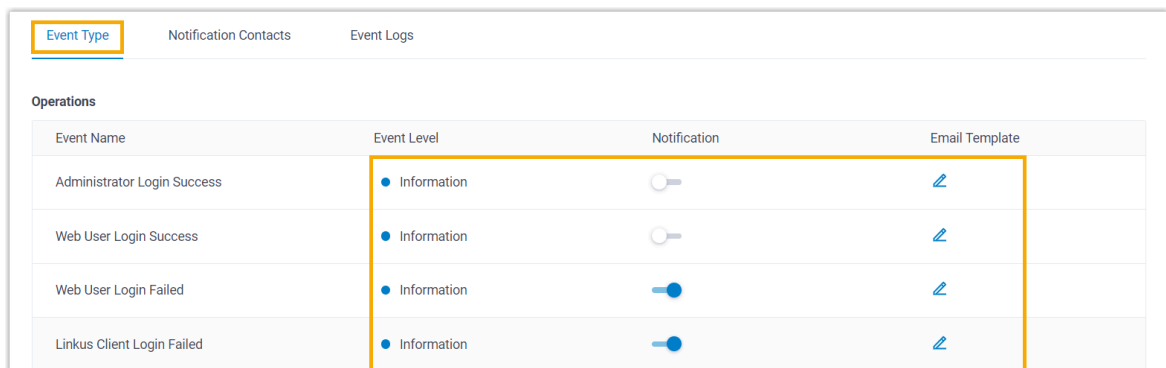

Event Type			
Notification Contacts			
Event Logs			
Operations			
Event Name	Event Level	Notification	Email Template
Administrator Login Success	Information	<input type="checkbox"/>	✎
Web User Login Success	Information	<input type="checkbox"/>	✎
Web User Login Failed	Information	<input checked="" type="checkbox"/>	✎
Linkus Client Login Failed	Information	<input checked="" type="checkbox"/>	✎

3. Under **Notification Contacts** tab, add contacts to receive event notifications.

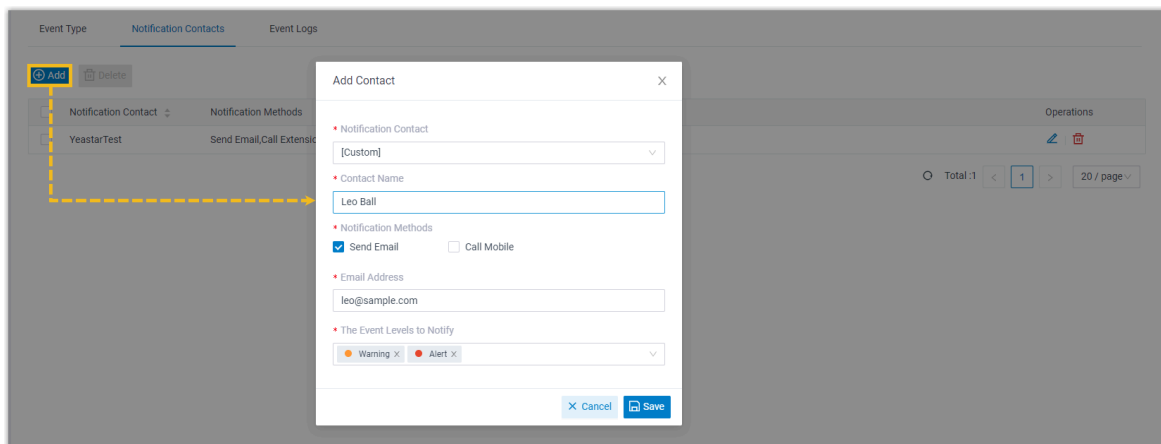

After receiving event notifications, you can check the details on PBX web portal (Path: **System > Event Notification > Event Logs**).

Event Type

Notification Contacts

Event Logs

Event Type

Event Level

Status

Event Name

Time

All

All

All

All

10/01/2023 00:00:00 ~ 10/12/2023 23:59:59

Download

Mark All as Read

Time	Event Type	Event Level	Event Name	Operations
10/11/2023 11:14:15	Operations	Information	Web User Login Failed	
10/10/2023 08:57:12	Telephony	Warning	SIP Trunk Registration Failed	
10/10/2023 08:56:03	System	Information	System Reboot	



Note:


For detailed introduction and instruction about **Event Notification and Logging**, see [Event Notification Overview](#).

Backup


Yeastar P-Series Cloud Edition allows you to back up the PBX's data and configurations. This will help you minimize downtime and data loss to ensure business continuity in case of system failure.

You can schedule automatic backups or create manual backups as needed.

1. Go to **Maintenance > Backup and Restore**.
2. To schedule automatic backups, click **Backup Schedule**, then set up and save the backup task.

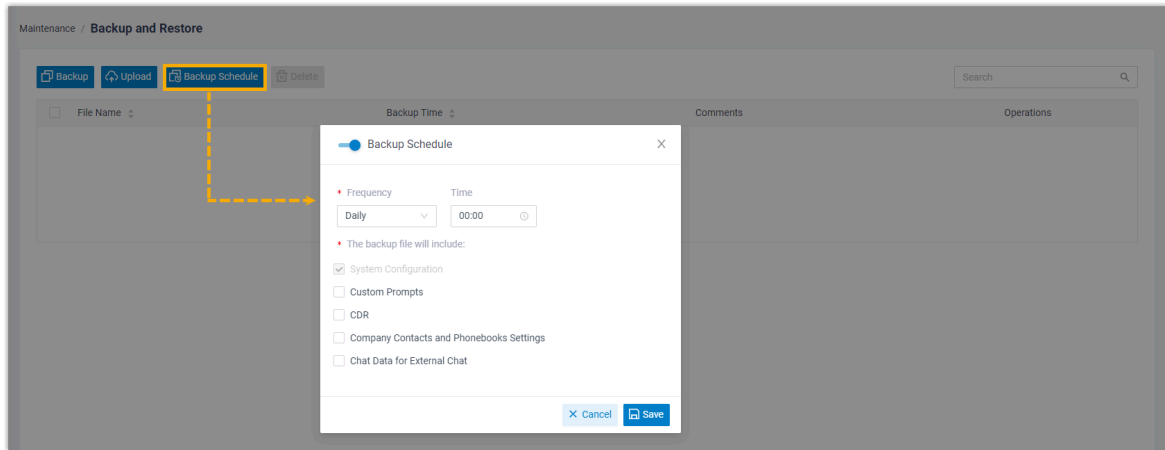

3. To create a manual backup, click **Backup**, then choose the data and configurations to back up and save the backup task.

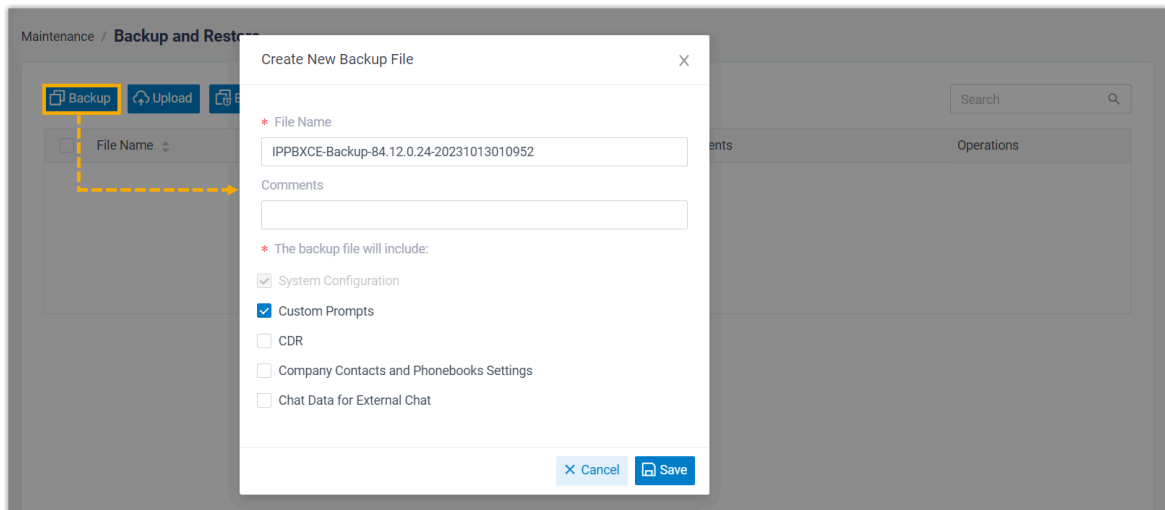

Note:

For detailed introduction and instruction about **Backup**, see [Overview of Backup and Restore](#).